



This PDF is generated from authoritative online content, and is provided for convenience only. This PDF cannot be used for legal purposes. For authoritative understanding of what is and is not supported, always use the online content. To copy code samples, always use the online content.

Active Recording Ecosystem Solution Guide

Call Recording

Call Recording

 
This section describes how call recording works.

Call Recording Initiated


There are four ways call recording can be initiated. Once started, the recording process is the same, regardless of how it was initiated.

One of the following initiates recording:

1. SIP Server initiates recording itself, for example, because a DN is configured to always be recorded.
2. SIP Server informs third party Call Recording of a call with a DN that Call Recording supports. Third party Call Recording has a recording rule for the DN. Third party Call Recording evaluates the rule, determines that the DN must be recorded and requests recording by sending the T-lib request, TrequestPrivateService, to SIP Server.
3. A third party, for example an agent desktop, requests call recording by sending the T-lib request, TrequestPrivateService, to SIP Server.
4. A recording can be initiated by a Routing Strategy (extension record=source in TrouteCall).

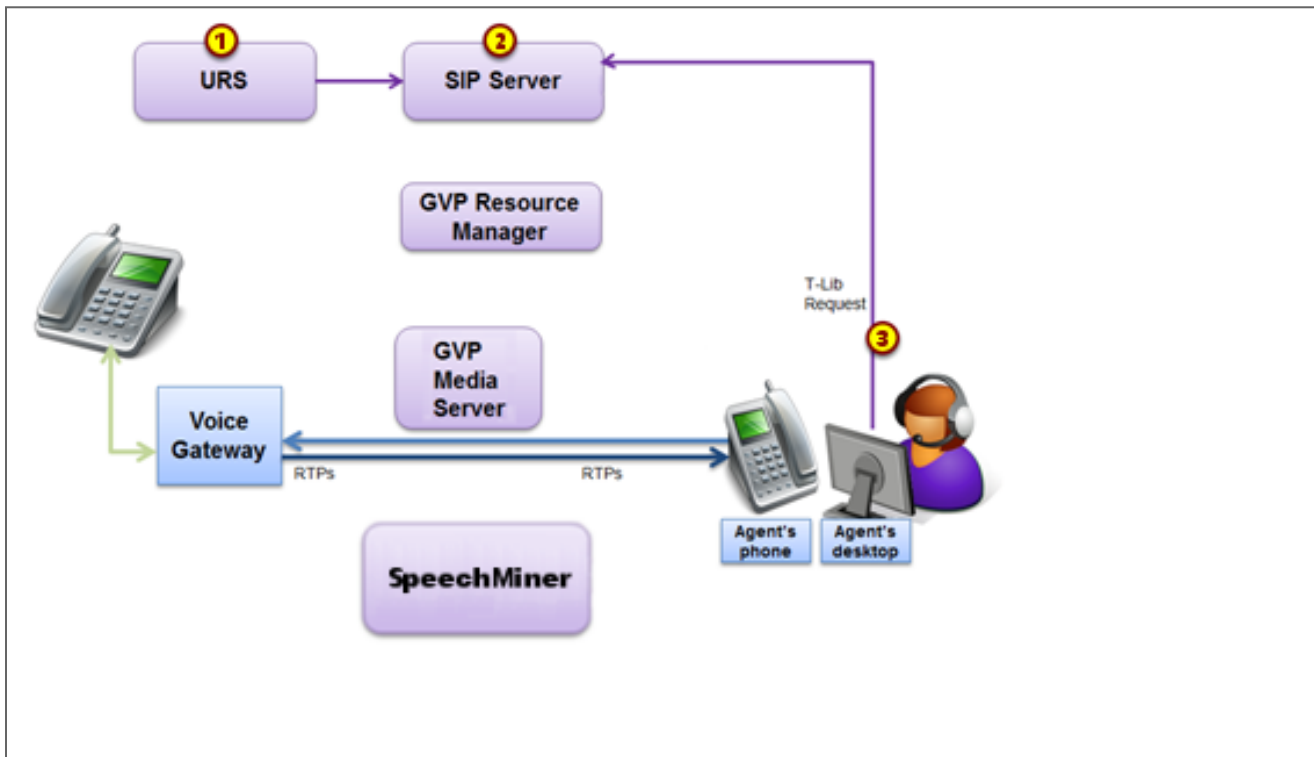


SIP Server Initiated Call Recording

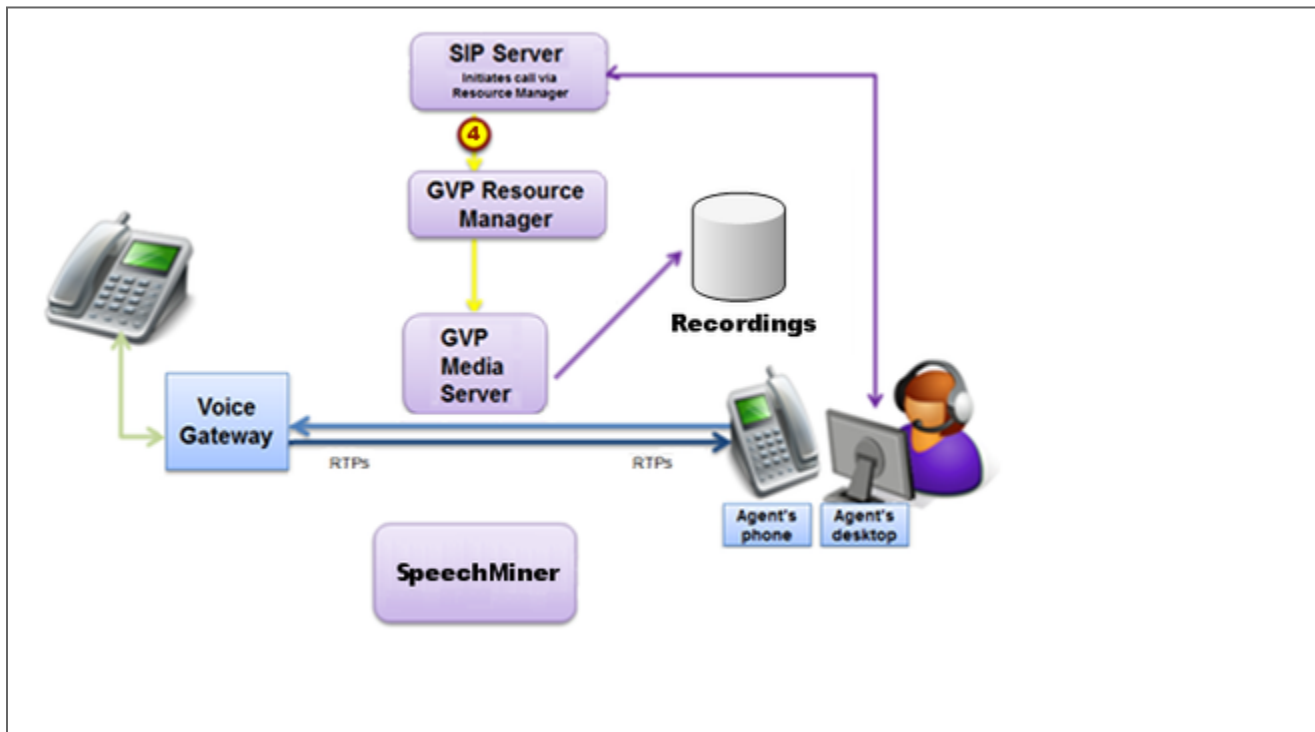 

5. Using media control, SIP Server invites Media Server to replicate the RTPs (two invites, one for each RTP stream).

 Media Server Replicates RTPs

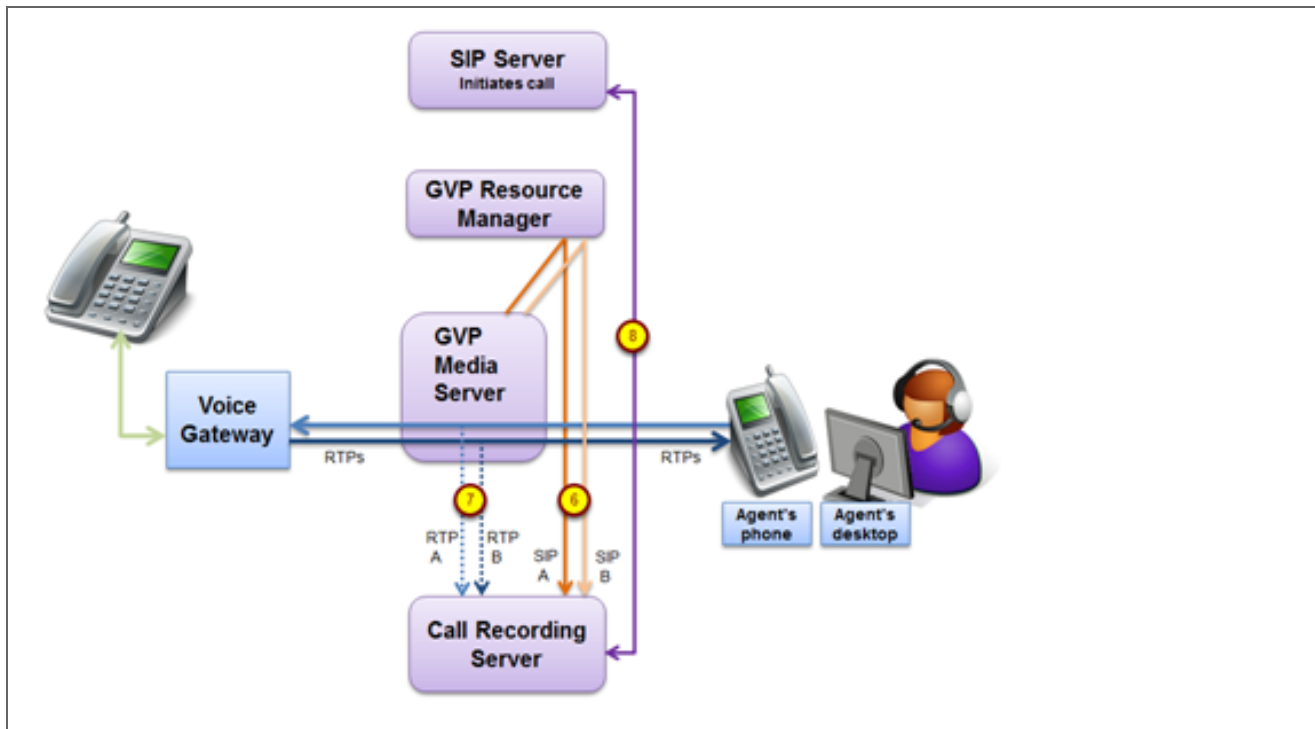


6. The Media Server replicates the RTP streams and:

- Sends the SIP invite messages to the Call Recording server (two invite messages, one for each RTP stream).
- Sends the RTPs to the Call Recording Server.


7. Recording starts. 8. The Call Recording server requests additional information, such as user attached data with T-Lib.

 Recording Starts

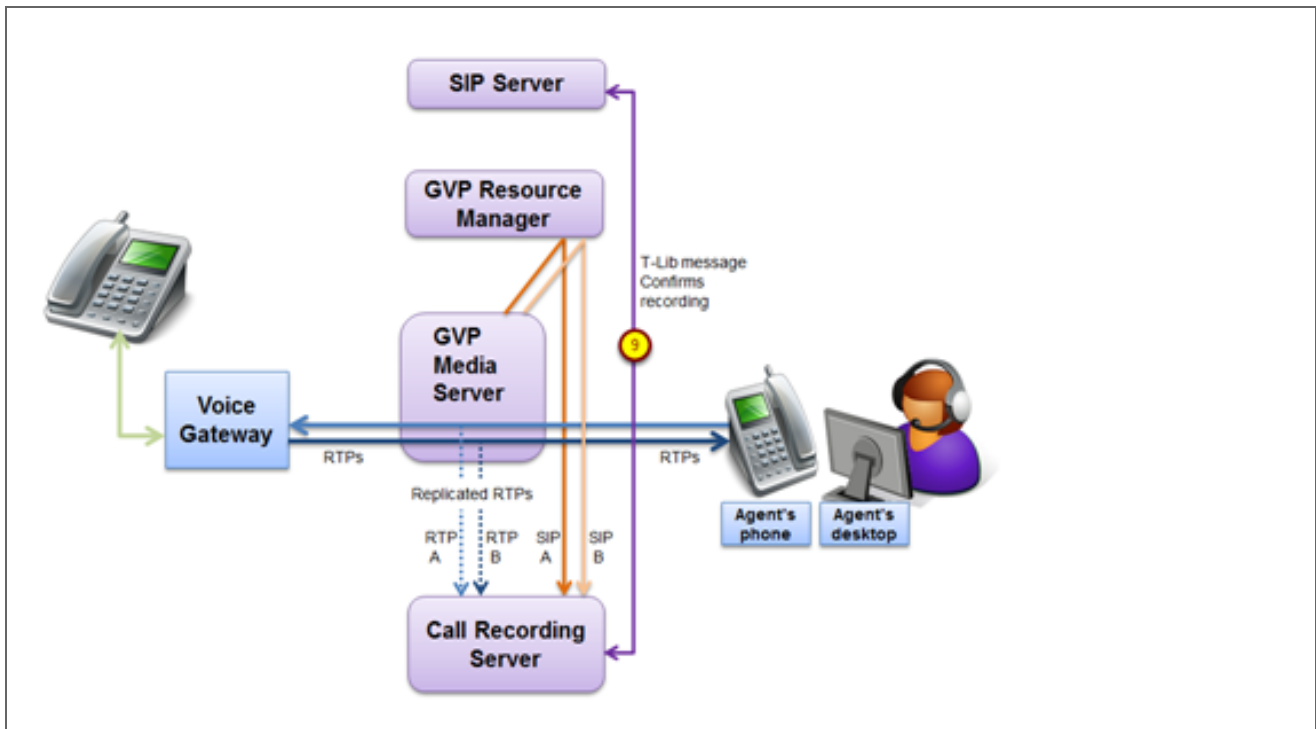

9. At any time the Call Recording Server or a third party (for example, the agent desktop) can use a `TrequestPrivateService` message for pause, resume, start and stop.

 Recording Ends

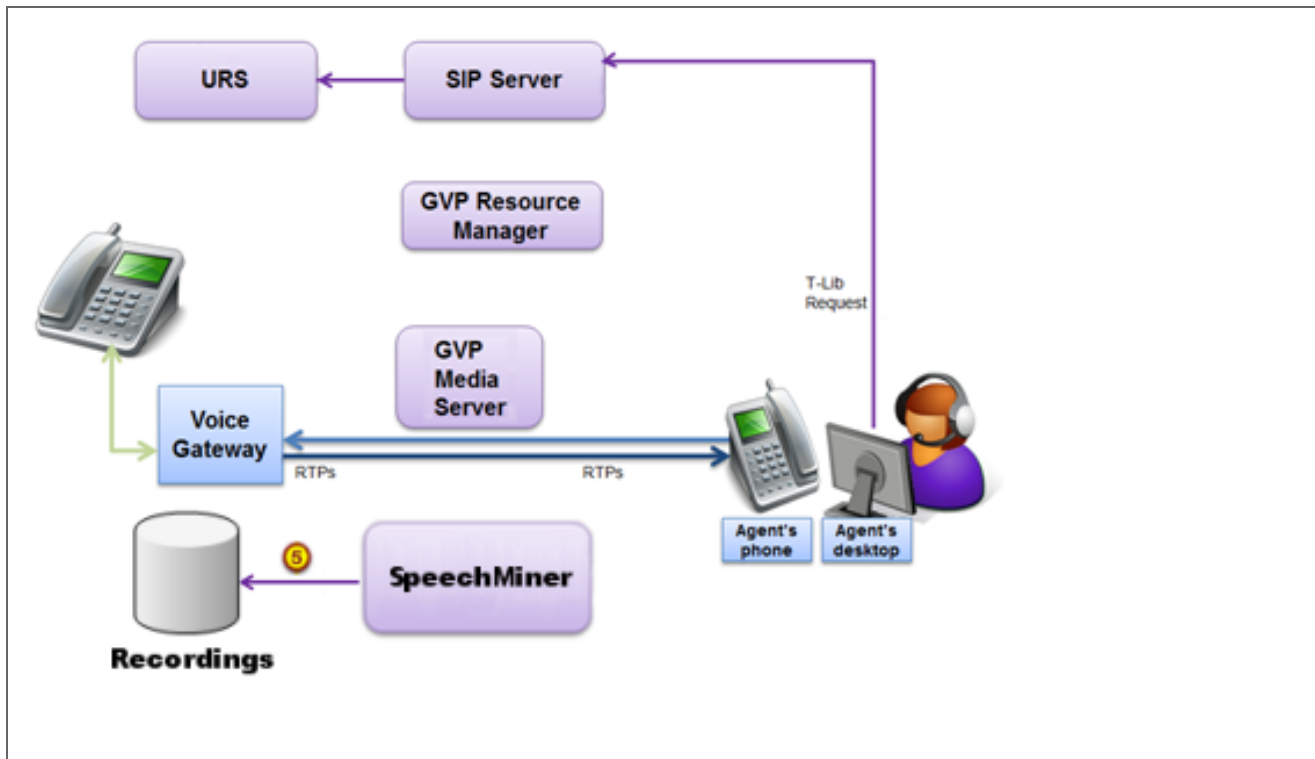

10. SIP messages from each stream indicate that the call has ended. The Call Recording Server stops recording.