



This PDF is generated from authoritative online content, and is provided for convenience only. This PDF cannot be used for legal purposes. For authoritative understanding of what is and is not supported, always use the online content. To copy code samples, always use the online content.

# Genesys Voice Platform

TServer Section

## TServer Section

- `smloc`
- `TServerAddress`
- `TSvrConnectionRetryCount`
- `UCMCClientPortRange`

### smloc

**Default Value:** SM

**Valid Values:**

**Changes Take Effect:** After restart

UCMC loc

### TServerAddress

**Default Value:**

**Valid Values:**

**Changes Take Effect:** After restart

IP Address and port information of the Cisco T-Server.(Eg: 10.10.10.10:5060)

### TSvrConnectionRetryCount

**Default Value:** 10

**Valid Values:**

**Changes Take Effect:** After restart

This parameter describes that on connection loss, how many times UCM-C should retry the connection to T-Server before it goes to sleep for configured time

### UCMCClientPortRange

**Default Value:**

**Valid Values:**

**Changes Take Effect:** After restart

The local client side TCP port range to be used for CP4SM transport with CISCO T-Server. If this parameter is not specified, UCMC will let the OS choose the local port. The port range MUST BE within the range of 1030-65535. Eg: 1050-1070