



This PDF is generated from authoritative online content, and is provided for convenience only. This PDF cannot be used for legal purposes. For authoritative understanding of what is and is not supported, always use the online content. To copy code samples, always use the online content.

# Genesys Voice Platform

PSTNConnector Section

## PSTNConnector Section

- **BoardType**

### BoardType

**Default Value:** DialogicManager

**Valid Values:**

**Changes Take Effect:** After restart

Type of the hardware used by PSTN Connector to interface with the TDM network