



This PDF is generated from authoritative online content, and is provided for convenience only. This PDF cannot be used for legal purposes. For authoritative understanding of what is and is not supported, always use the online content. To copy code samples, always use the online content.

# SIP Endpoint SDK Overview

T-Lib Termination TReleaseCall

# T-Lib Termination TReleaseCall

## Warning

**This documentation is outdated and is included for historical purposes only.**

## Description

The T-Lib client initiates the termination of the call by invoking TReleaseCall from the agent desktop at UA2. SIP Server terminates the existing call from UA1 to UA2 by sending two BYE requests.

## Diagram

