

GENESYS[®]

This PDF is generated from authoritative online content, and is provided for convenience only. This PDF cannot be used for legal purposes. For authoritative understanding of what is and is not supported, always use the online content. To copy code samples, always use the online content.

Integration Reference Manual

AudioCodes Gateway

AudioCodes Gateway

This topic describes how to integrate SIP Server with the AudioCodes Gateway. It contains the following sections:

- Overview
- Configuring the AudioCodes Gateway
- Configuring AudioCodes Gateway DN Objects

Note: The instructions in this topic assume that the AudioCodes Gateway is fully functional and connected to the corresponding PBX.